



- 1] TV INPUT SOURCE SELECT**  
Changes video input on TV if remote is programmed with a TV infrared code.
- 2] TV/AUX POWER/STANDBY**  
Powers on or off the TV.
- 3] COLOR NAVIGATION**  
RED: Accesses recorded and scheduled shows  
GREEN: Access All Shows  
YELLOW: Access Live TV  
BLUE: Access All Movies
- 4] A BUTTON**  
Accesses replay of shows on current channel.
- 5] DVR FUNCTIONS**  
Pauses/plays, fast-forwards/rewinds, stops, and records shows and movies.
- 6] APPS**  
Accesses all apps on the TV.
- 7] NAVIGATION AND OK**  
Navigates through the TV Now platform. Press OK to make a selection.
- 8] BACK**  
Returns to the previous menu or state within current app. From live video, this key opens the Main Menu.
- 9] VOLUME UP/DOWN**
- 10] CHANNEL SELECT/TEXT**  
Enters channel numbers in the GUIDE or full screen video. Also used to manual text entry.
- 11] INFORMATION**  
Accesses program information and starts recording.
- 12] SEARCH**  
Searches for programs using microphone voice search, text-field, or quick search.
- 13] INFRA-RED WINDOW**  
Communicates with TV and Amigo box.
- 14] MICROPHONE**  
Recognizes voice commands for voice search.
- 15] STB POWER/STANDBY**  
Switches STB power on or into standby or off mode.
- 16] B BUTTON**  
Launches menu of recently accessed programs and channels.
- 17] C BUTTON**  
Displays settings.
- 18] CHANNEL GUIDE**
- 19] HOME**  
Launches Android TV main menu, including access to apps.
- 20] GOOGLE ASSISTANT**  
Launches voice-based Google Assistant search.
- 21] CHANNEL UP/DOWN**
- 22] MUTE**
- 23] SUBTITLES/CLOSED CAPTIONS**
- 24] LAST CHANNEL RECALL**
- 25] LOW BATTERY WARNING LIGHT**

\*Some remote features may not be available.

