



Lima Remote Control User Guide




Remote control layout

- 1 TV input source select
- 2 Apps
- 3 Navigation and OK
- 4 Back
- 5 Last channel recall
- 6 Volume up and down
- 7 'A' button
- 8 'B' button
- 9 Search
- 10 LED light
- 11 Infra-red (IR) window
- 12 Microphone
- 13 TV power on/off
- 14 Voice control
- 15 Settings
- 16 On-screen cursor control
- 17 Electronic Program Guide
- 18 Home
- 19 Channel up and down
- 20 Mute
- 21 'C' button
- 22 Subtitles / closed captions



1. Inserting the batteries

1. Slide the battery housing cover down on the back of the remote control.
2. Insert 2x AAA batteries, observing the correct polarity.
3. Refit the battery housing cover.

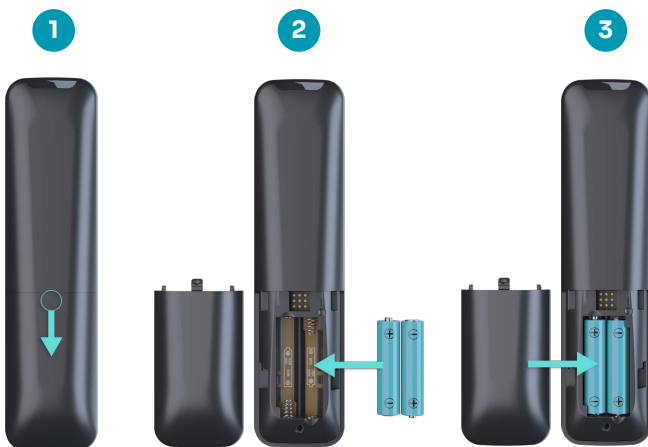


Battery information

- Do not mix different types of battery or old and new batteries.
- Do not use rechargeable batteries.
- Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.
- Please respect the environment and any local regulations and dispose of old batteries in a responsible manner.
- Do not attempt to recharge the batteries supplied with your remote control.
- Immediately remove any leaking batteries.
- Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

2. Controlling the STB (pairing the remote control)

The Lima remote control is designed to control your STB and (optionally) your TV or auxiliary device (alternative video source). Ensure the STB is powered on, connected to a TV, and has finished its start-up procedure. Ensure your TV input source is set to display the output from the STB.

During the initial setup of the STB, you will be guided through the process of pairing the remote control with the STB. The image below shows what you can expect to see on your TV screen.

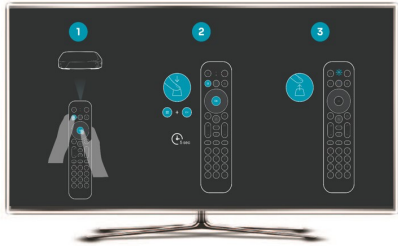

- 1. Point the remote control at the STB. Do not cover the infrared (IR) window on the front of the remote control or at the front of the STB.
- 2. Press and hold the OK key (3) and APPS key (2) simultaneously for 5 seconds until the LED light (10) turns on.
- 3. Release both keys.
- 4. The LED light will blink continuously to indicate pairing.

Once the pairing is successful, the pairing screen will disappear from your screen and the LED will blink twice.

Note: The remote is in “pairing mode” when the LED light (10) is blinking on and off continuously. When in pairing mode, only the BACK key (4) on the remote control will work. You must press the BACK key to exit pairing mode if you wish to use any other function.

3. Controlling the TV with your Lima remote

The Lima remote control for Android TV supports two methods for control of TV.

A) Manual Code Set Up

Each code consists of 3 digits.

Please visit the following webpage for Lima TV codes: <https://www.amino.tv/resources/#userguides>

It may be programmed as follows:

- 1. Press and hold the Source (key #1) and Power (key #2) simultaneously for at least 3 seconds.
- 2. The remote control confirms the Setup activation by turning on the LED.
- 3. Enter the 3 digits code assigned to the target TV model, by pressing and releasing the corresponding digit keys. Note, the LED reverse blinks once for every digit key press, except for the last one.
 - a. If the code input is valid, the new code is programmed and the LED performs a Success Blink
 - b. If the code input is invalid (i.e. is not available in the Universal Code Library), the new code is rejected and the RCU maintains the previously programmed code (if it's already programmed). Please try again.

B) Quick Search by Brand

Quick Search by Brand provides programming the Lima remote control to a desired key brand.

Each brand is associated with a specific digit: 0 to 9 and only the top 10 most popular Brands are represented. **See table below.**

Digital Key Number	Top Brand ID	Brand Name	Total Codes
1	1	Samsung	18
2	2	LG	16
3	3	TCL	19
4	4	Hisense	37
5	5	Xiaomi	1
6	6	Sony	3
7	7	Skyworth	25
8	8	Philips	9
9	9	Vizio	5
0	10	Sharp	20

- 1. Press and hold Source (key #1) and a Digit simultaneously for at least 3 seconds. The digit key corresponds to the brand of the target TV device to be programmed.
- 2. After 3 seconds the LED turns on, confirming Setup activation; it remains on during Quick Search by Brand Setup
- 3. Release the keys.
- 4. Press and release the Right key. Every time the Right key is pressed, the RCU advances to the next available code and transmits 3 IR frames of the TV Mute function:
 - a. If the RCU does not have a programmed code, or if the programmed code is not from the selected brand, the search list starts in the first code in the selected brand.

- b. If the RCU already has a TV device programmed and the programmed code is in the list of codes for the selected Brand, then the first code to test is the code following the currently programmed code (i.e. currently programmed code + 1) in the Brand's Code List; the last code to test is the one previous to the currently programmed one (i.e. currently programmed code - 1).
 - c. The LED turns off and then on again, when the key is pressed.
- 5. Press the OK to store the code.

5. How do I return my remote to Factory Settings?

- 1. Press and hold Source (key #1) and Apps (key #3) simultaneously for at least 3 seconds.
- 2. The LED turns on to confirm the Setup mode activation.
- 3. Release the keys to confirm the operation and you will see the LED complete a success blink.